


Inset Lights and Bookcases

(Back View of cabinet with Center/Bed section removed)

Standard Extension Cord
(May be routed lower and through base cutout)

Not used

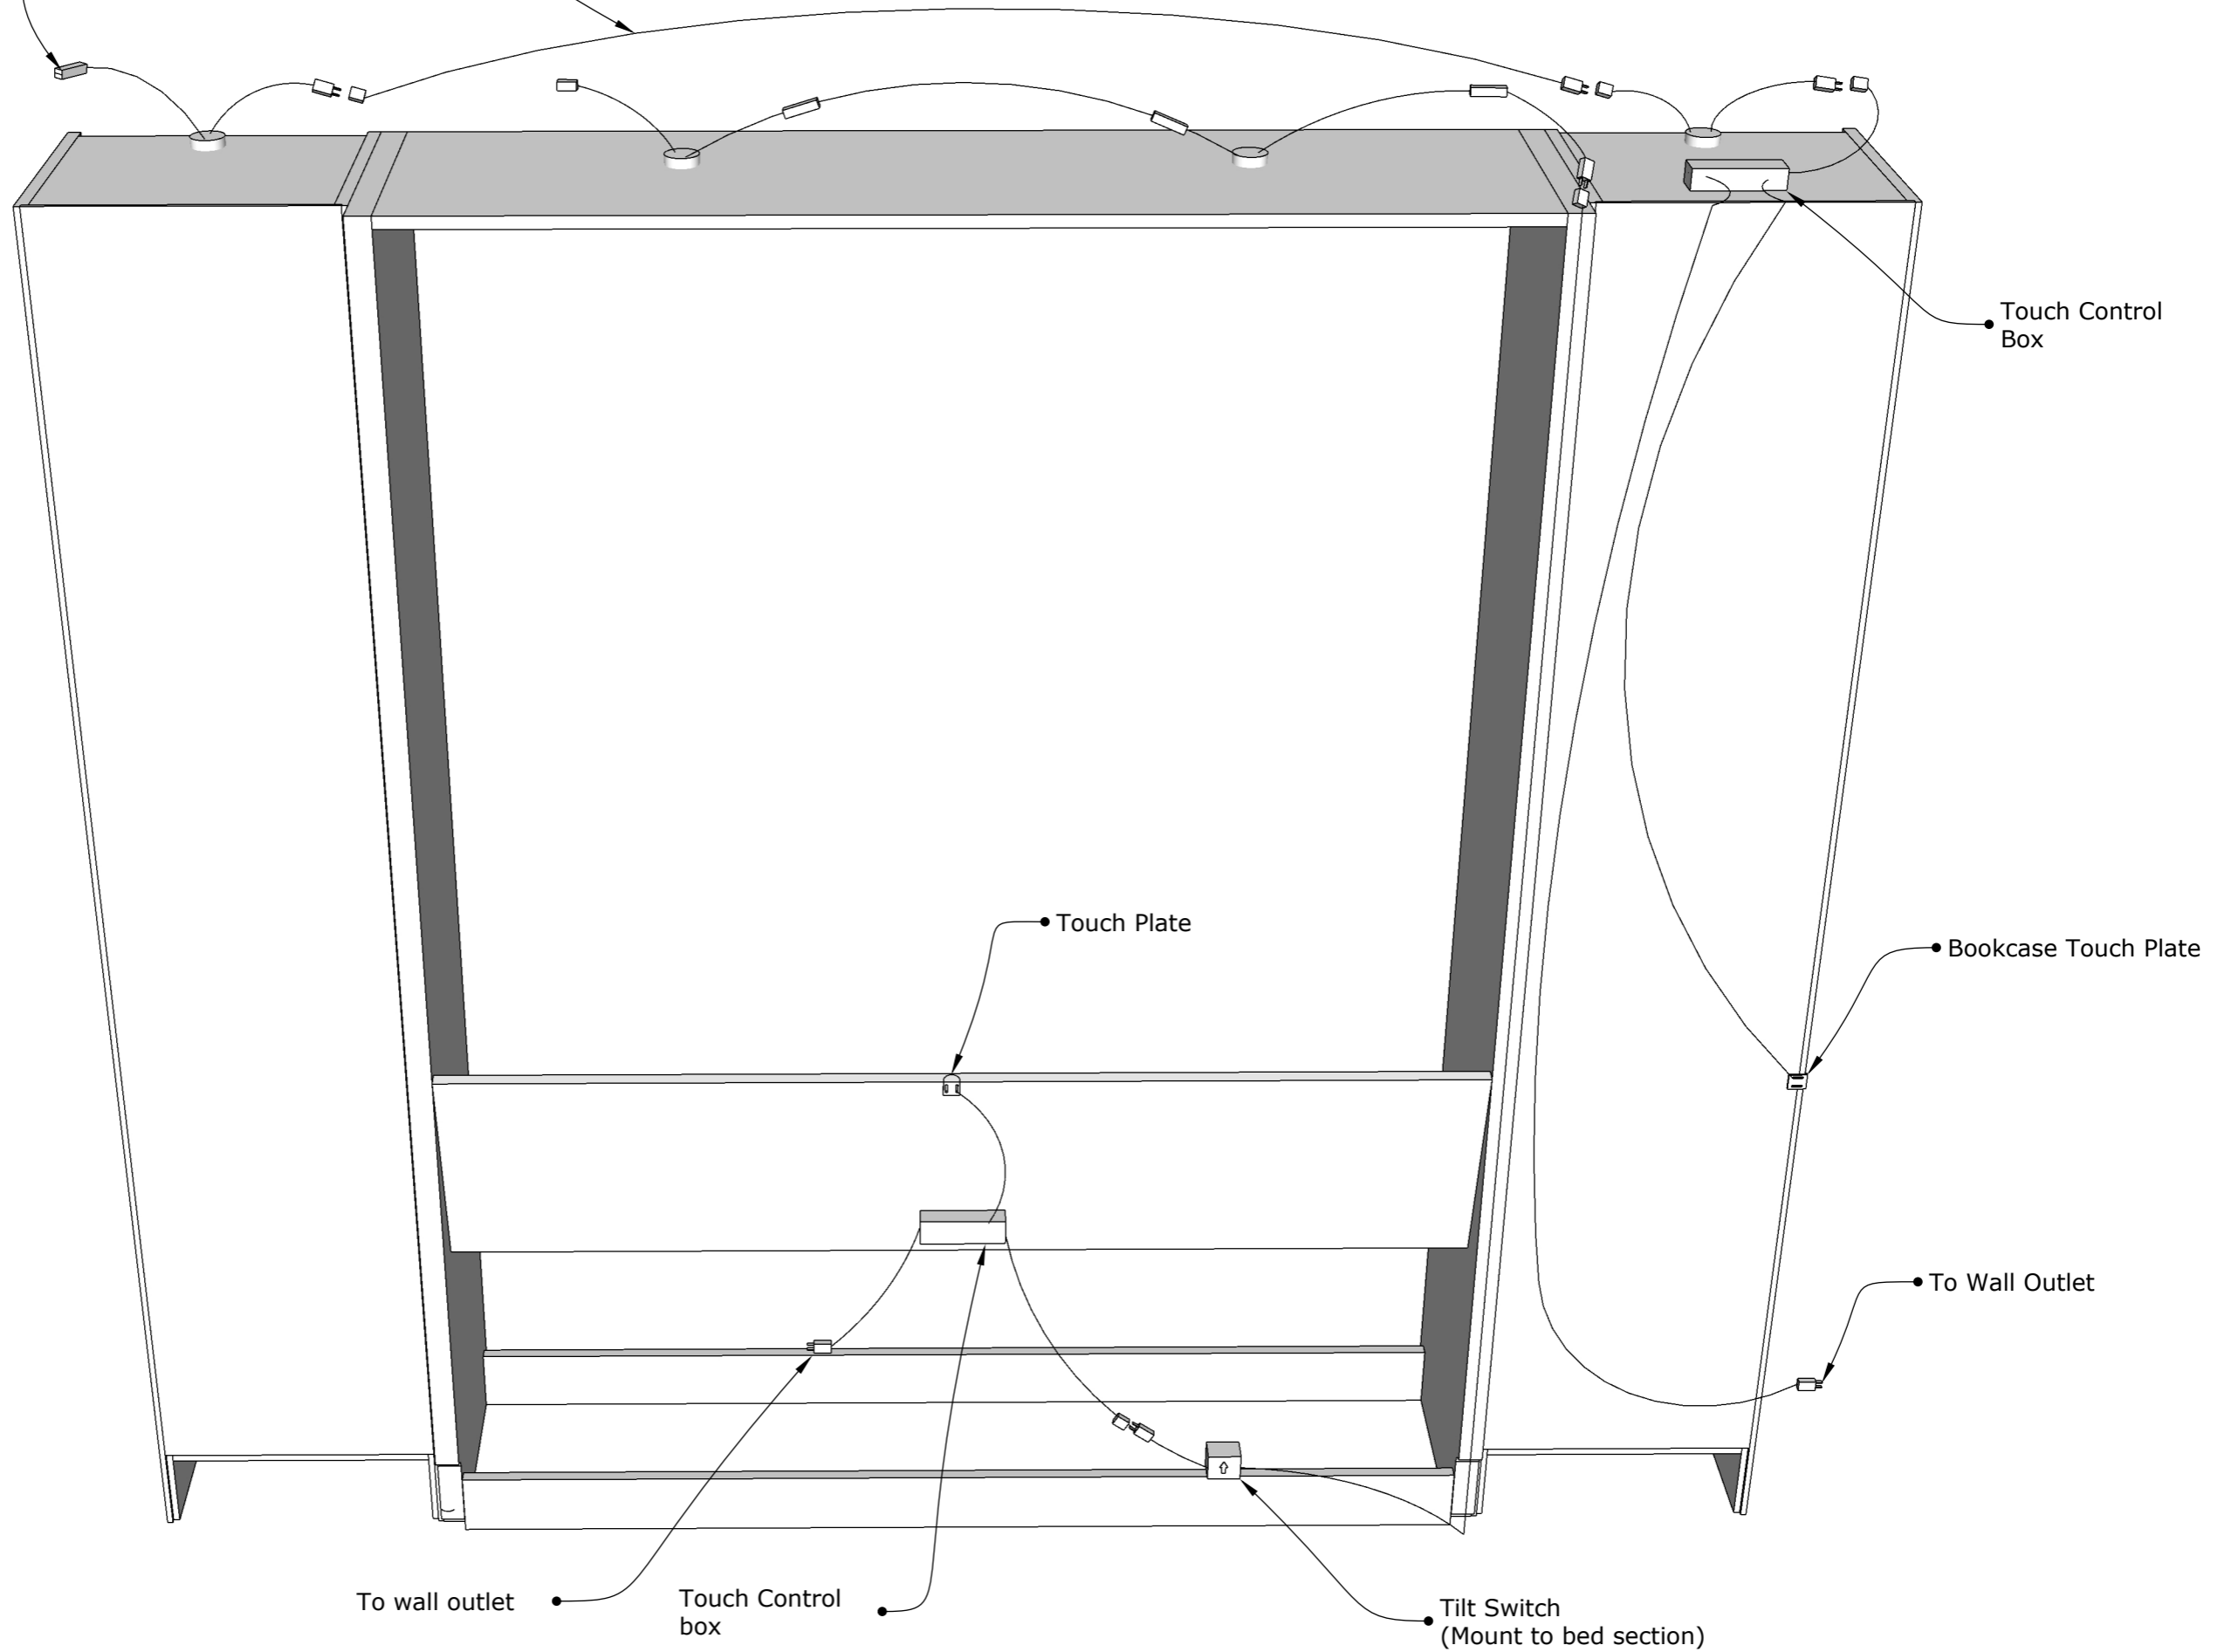

Touch Control Box

Touch Plate

Bookcase Touch Plate

To Wall Outlet


To wall outlet

Touch Control box

Tilt Switch
(Mount to bed section)


Inset Lights and Bookcases

(Back View of cabinet with Center/Bed section removed)

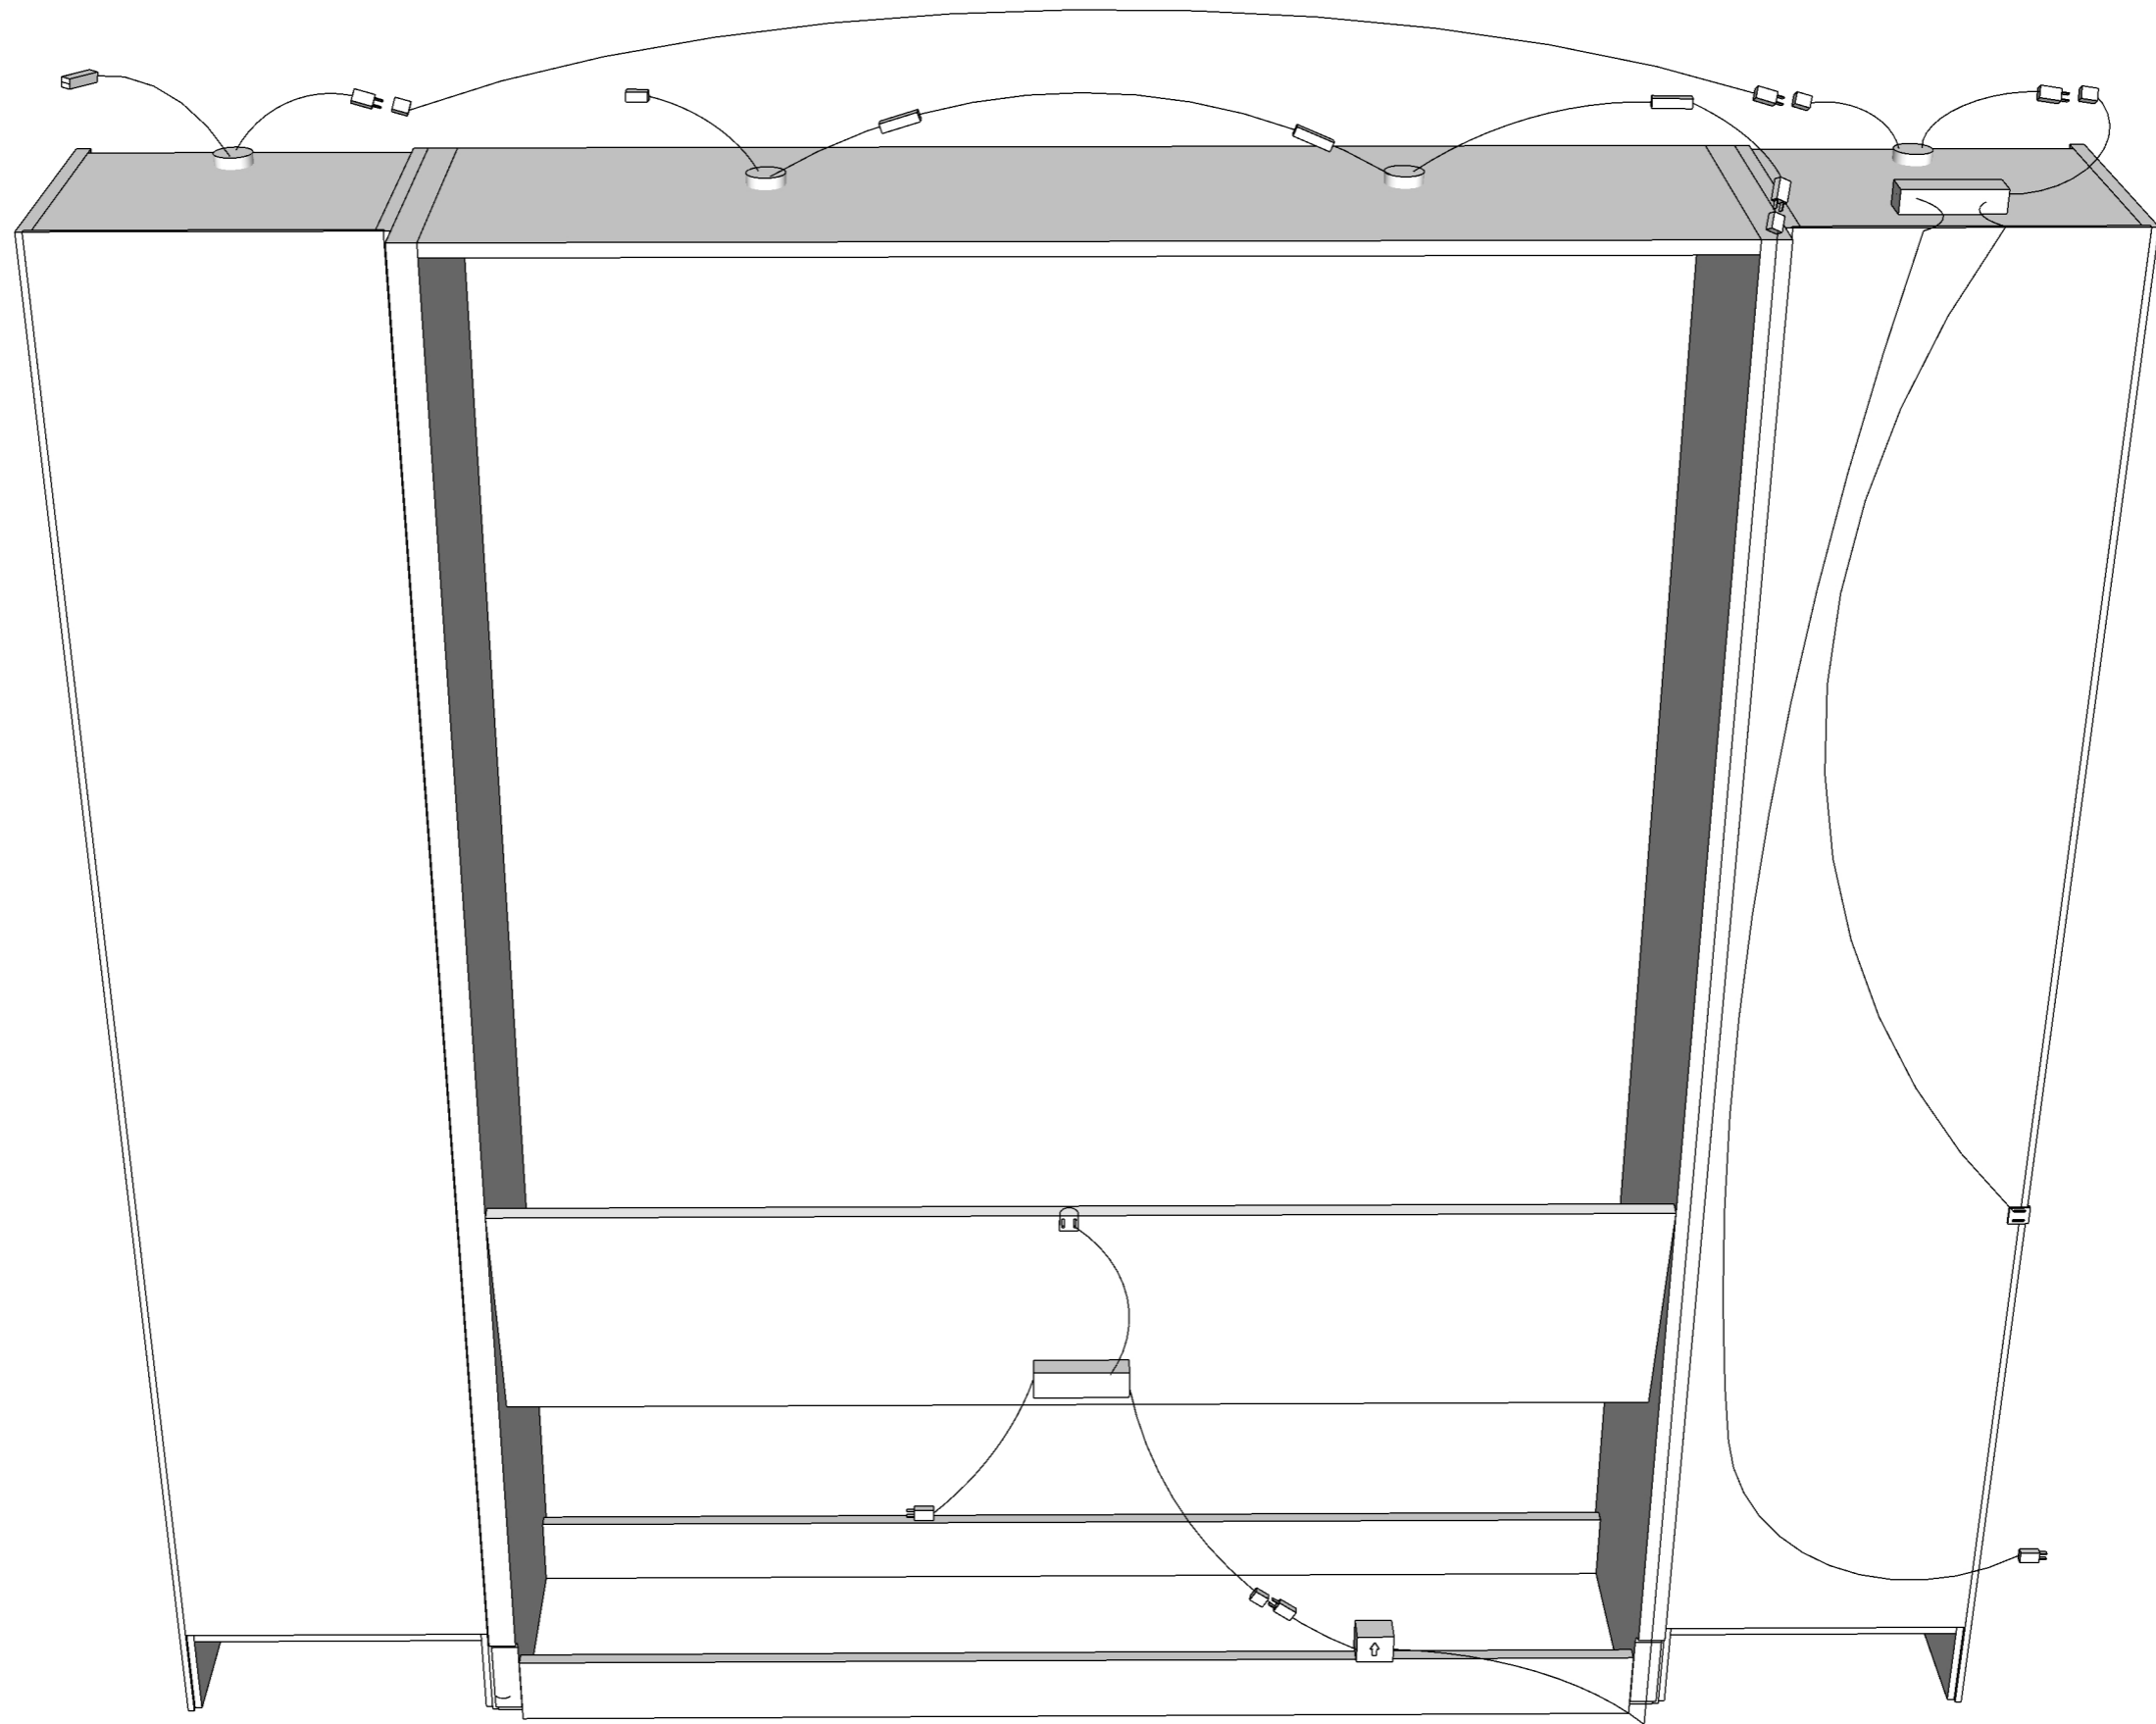


Inset Lights No Bookcases

(Back View of cabinet with Center/Bed section removed)

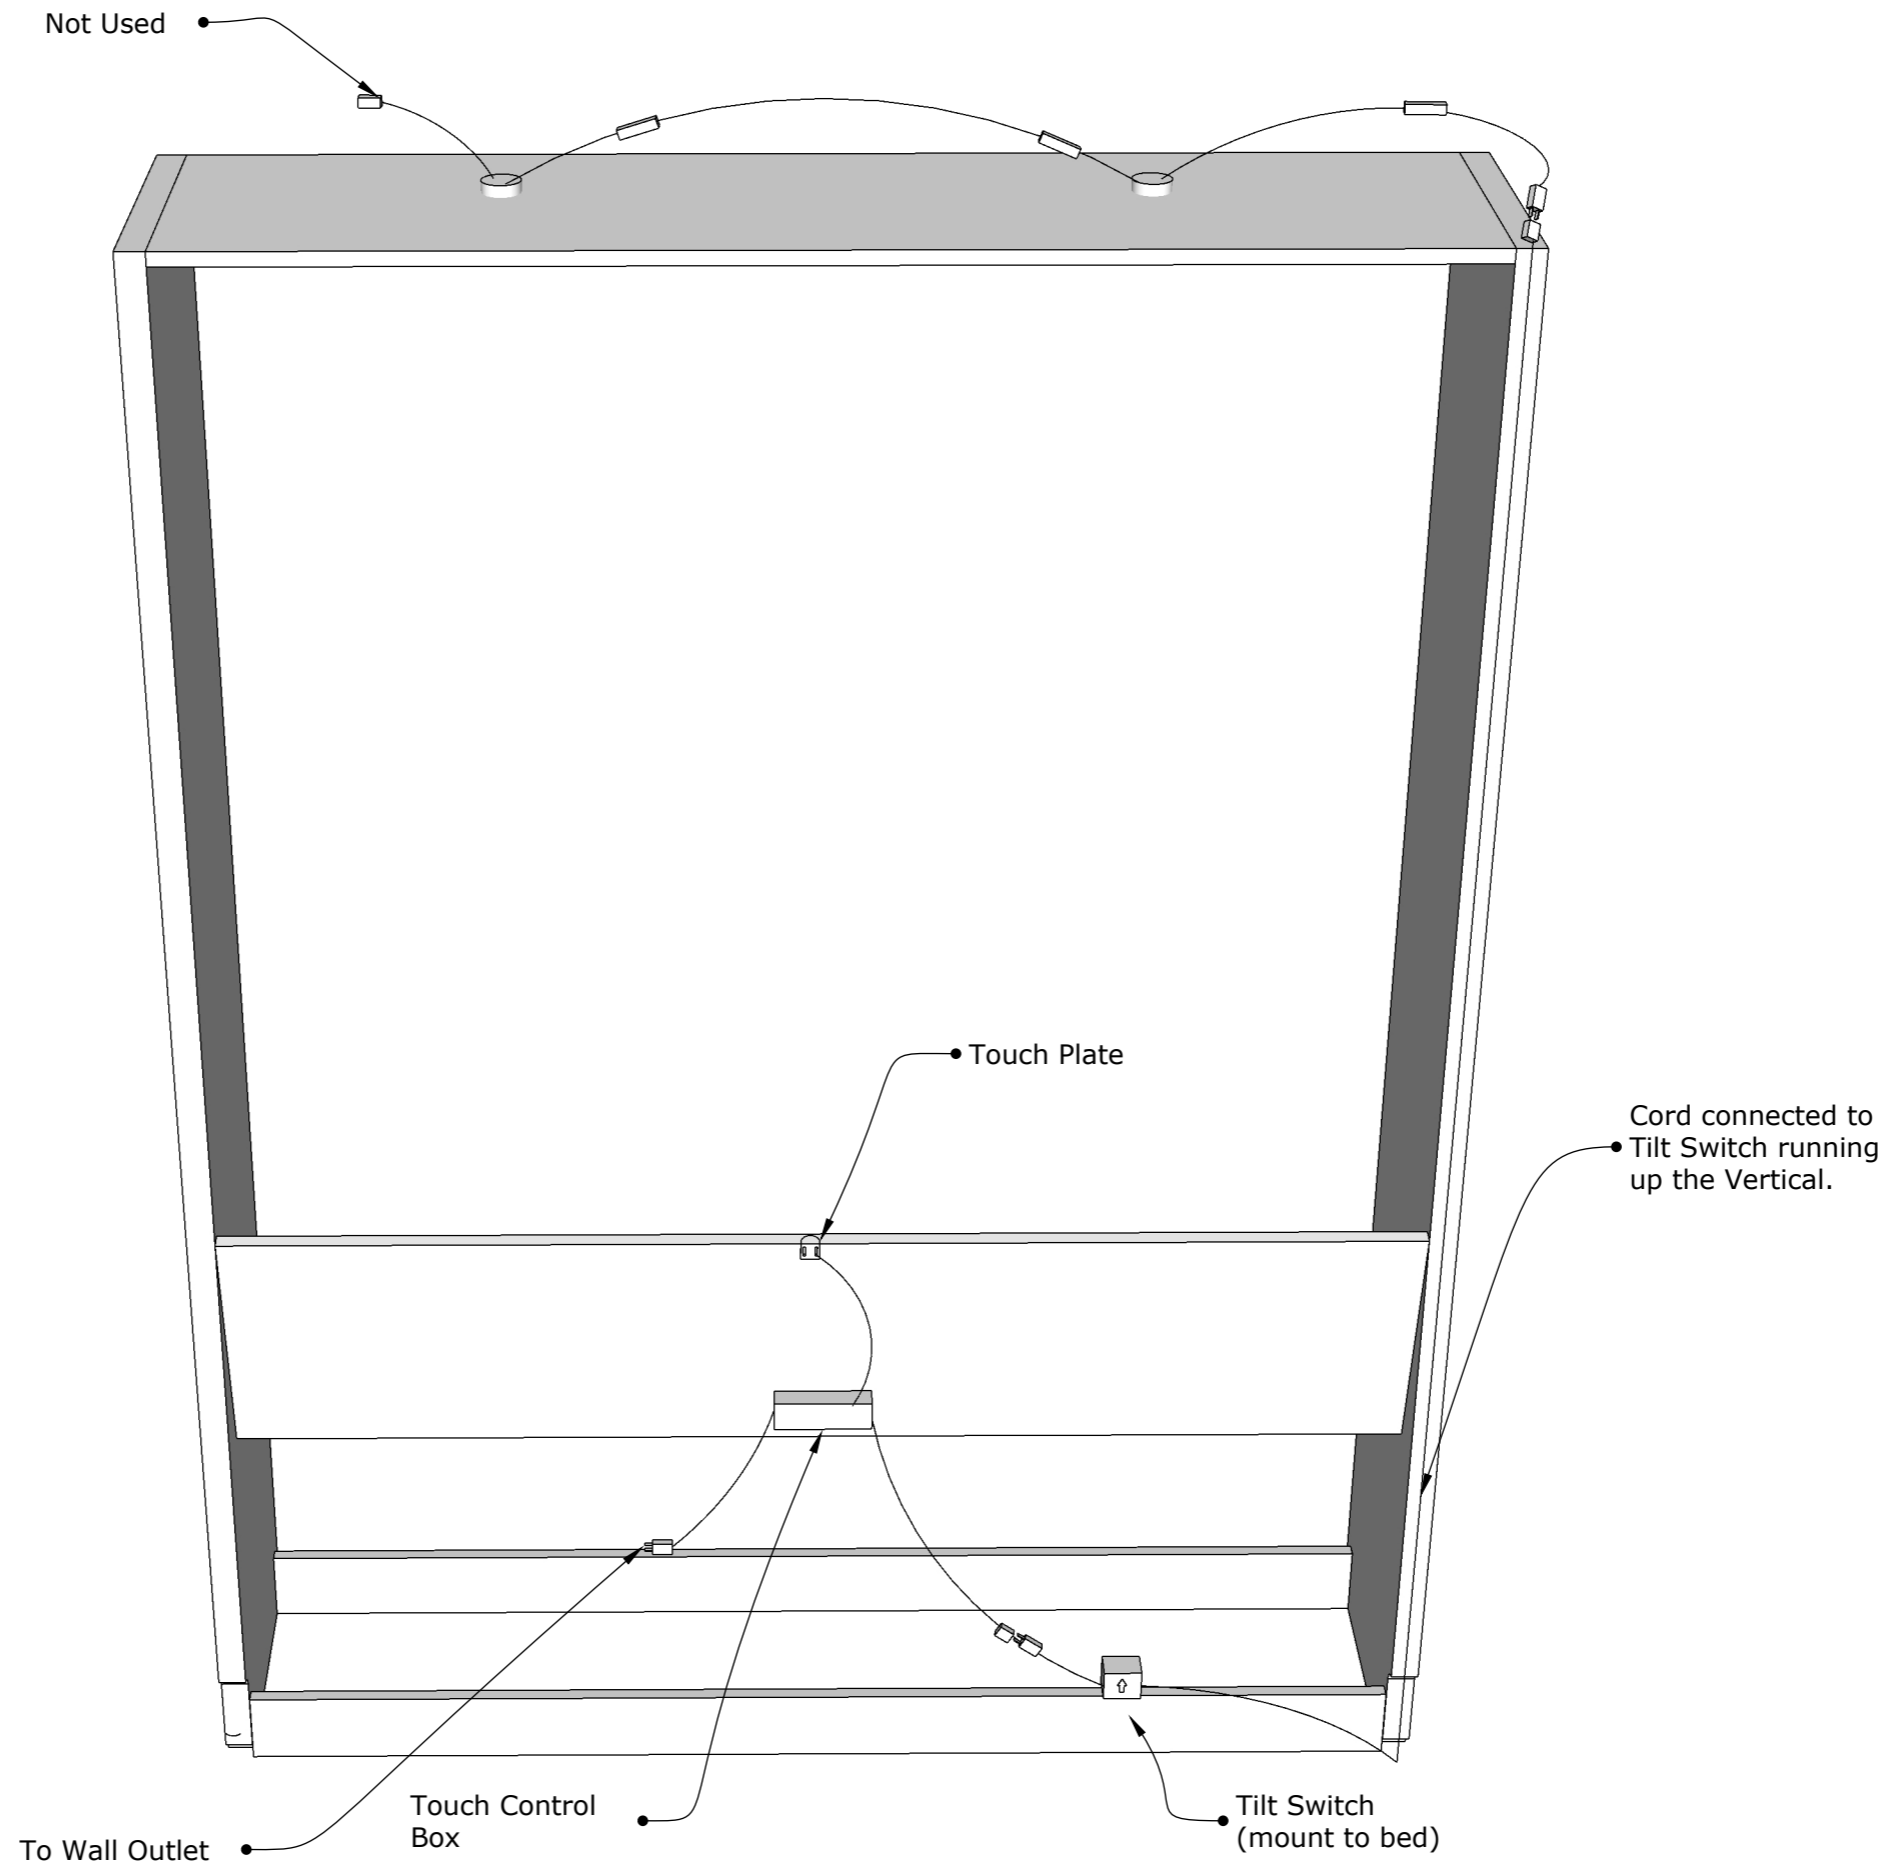


Inset Lights No Bookcases

(Back View of cabinet with Center/Bed section removed)

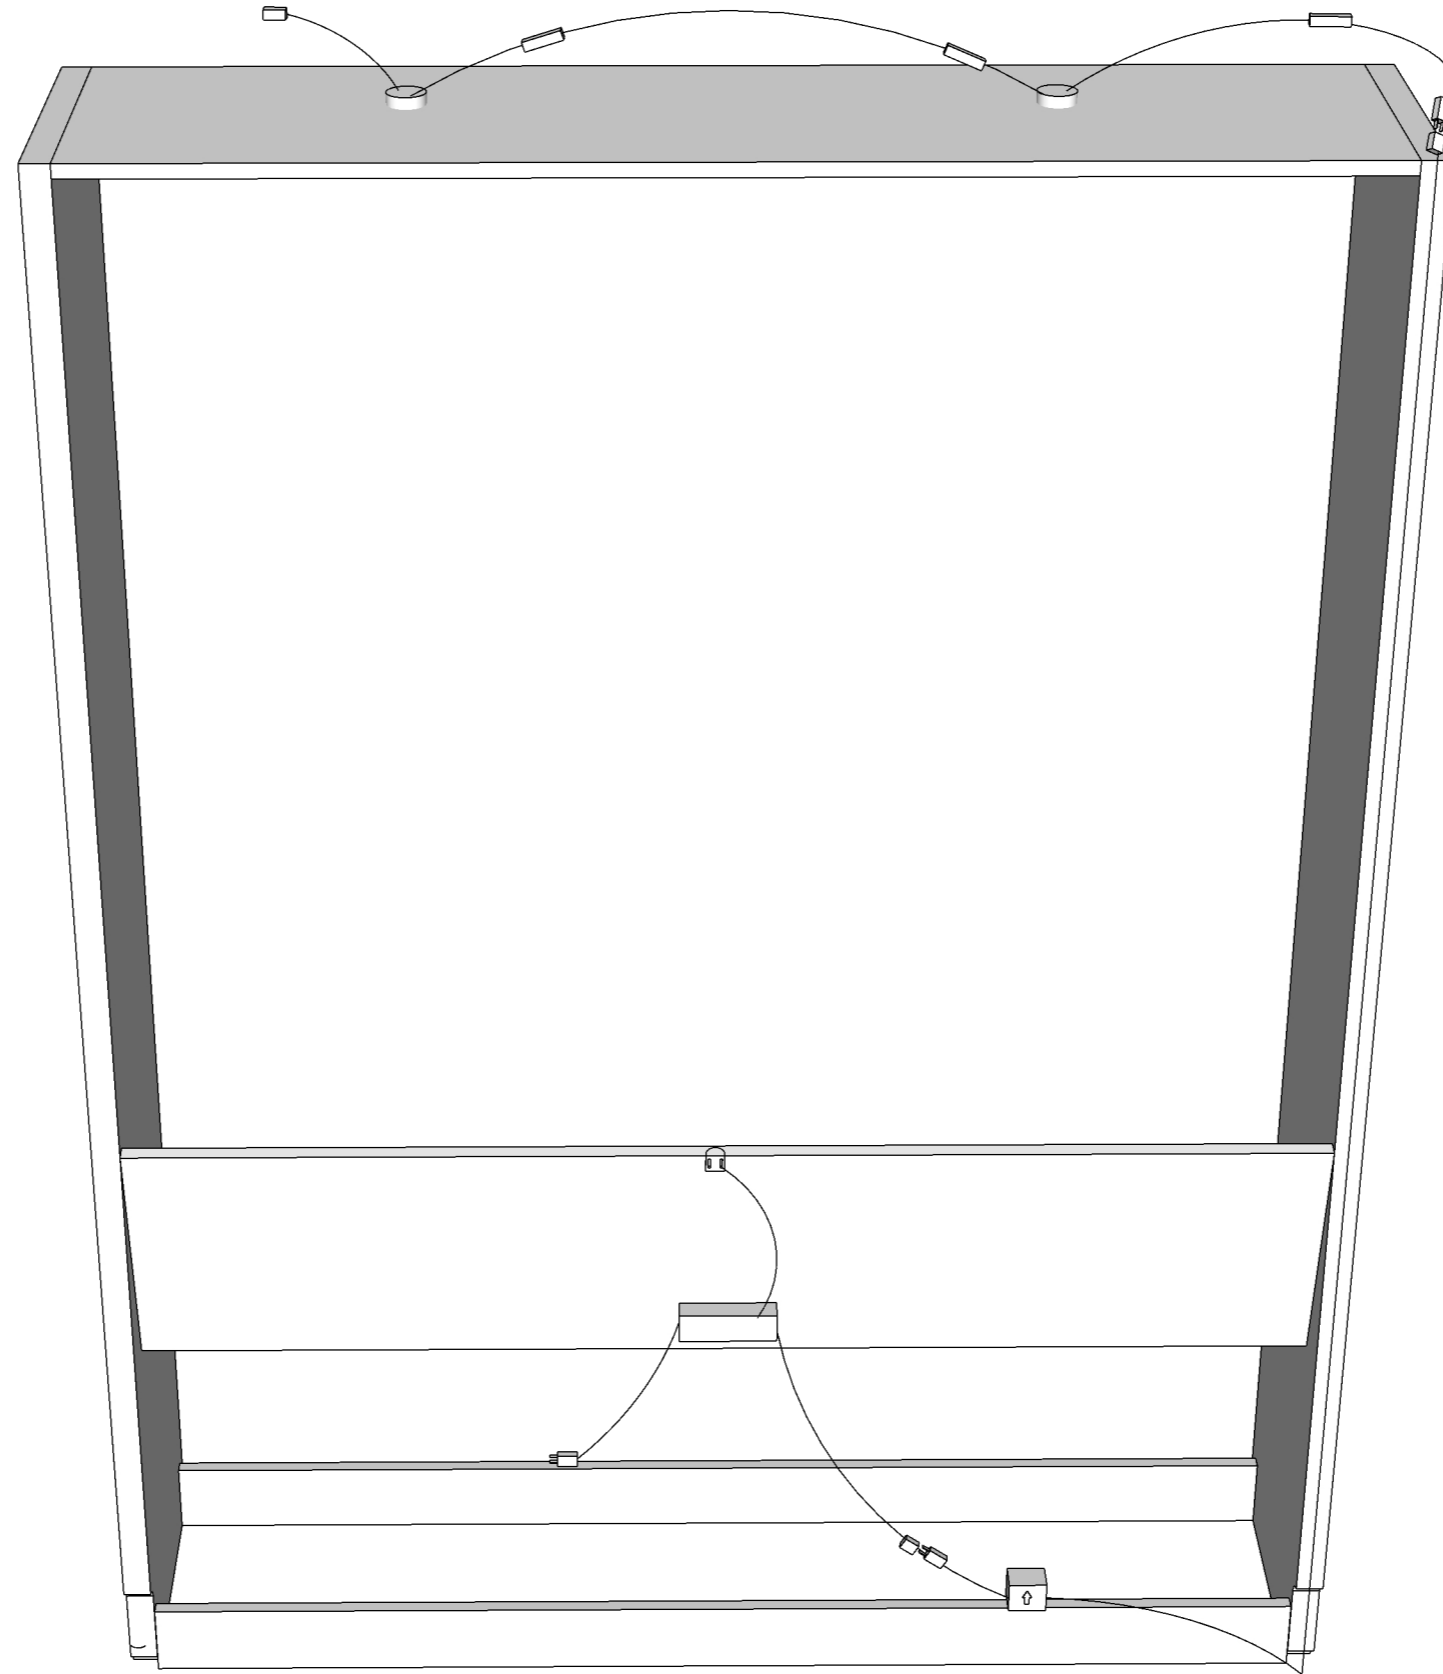


Outlet Lights with Bookcases

(Back View of cabinet with Center/Bed section removed)

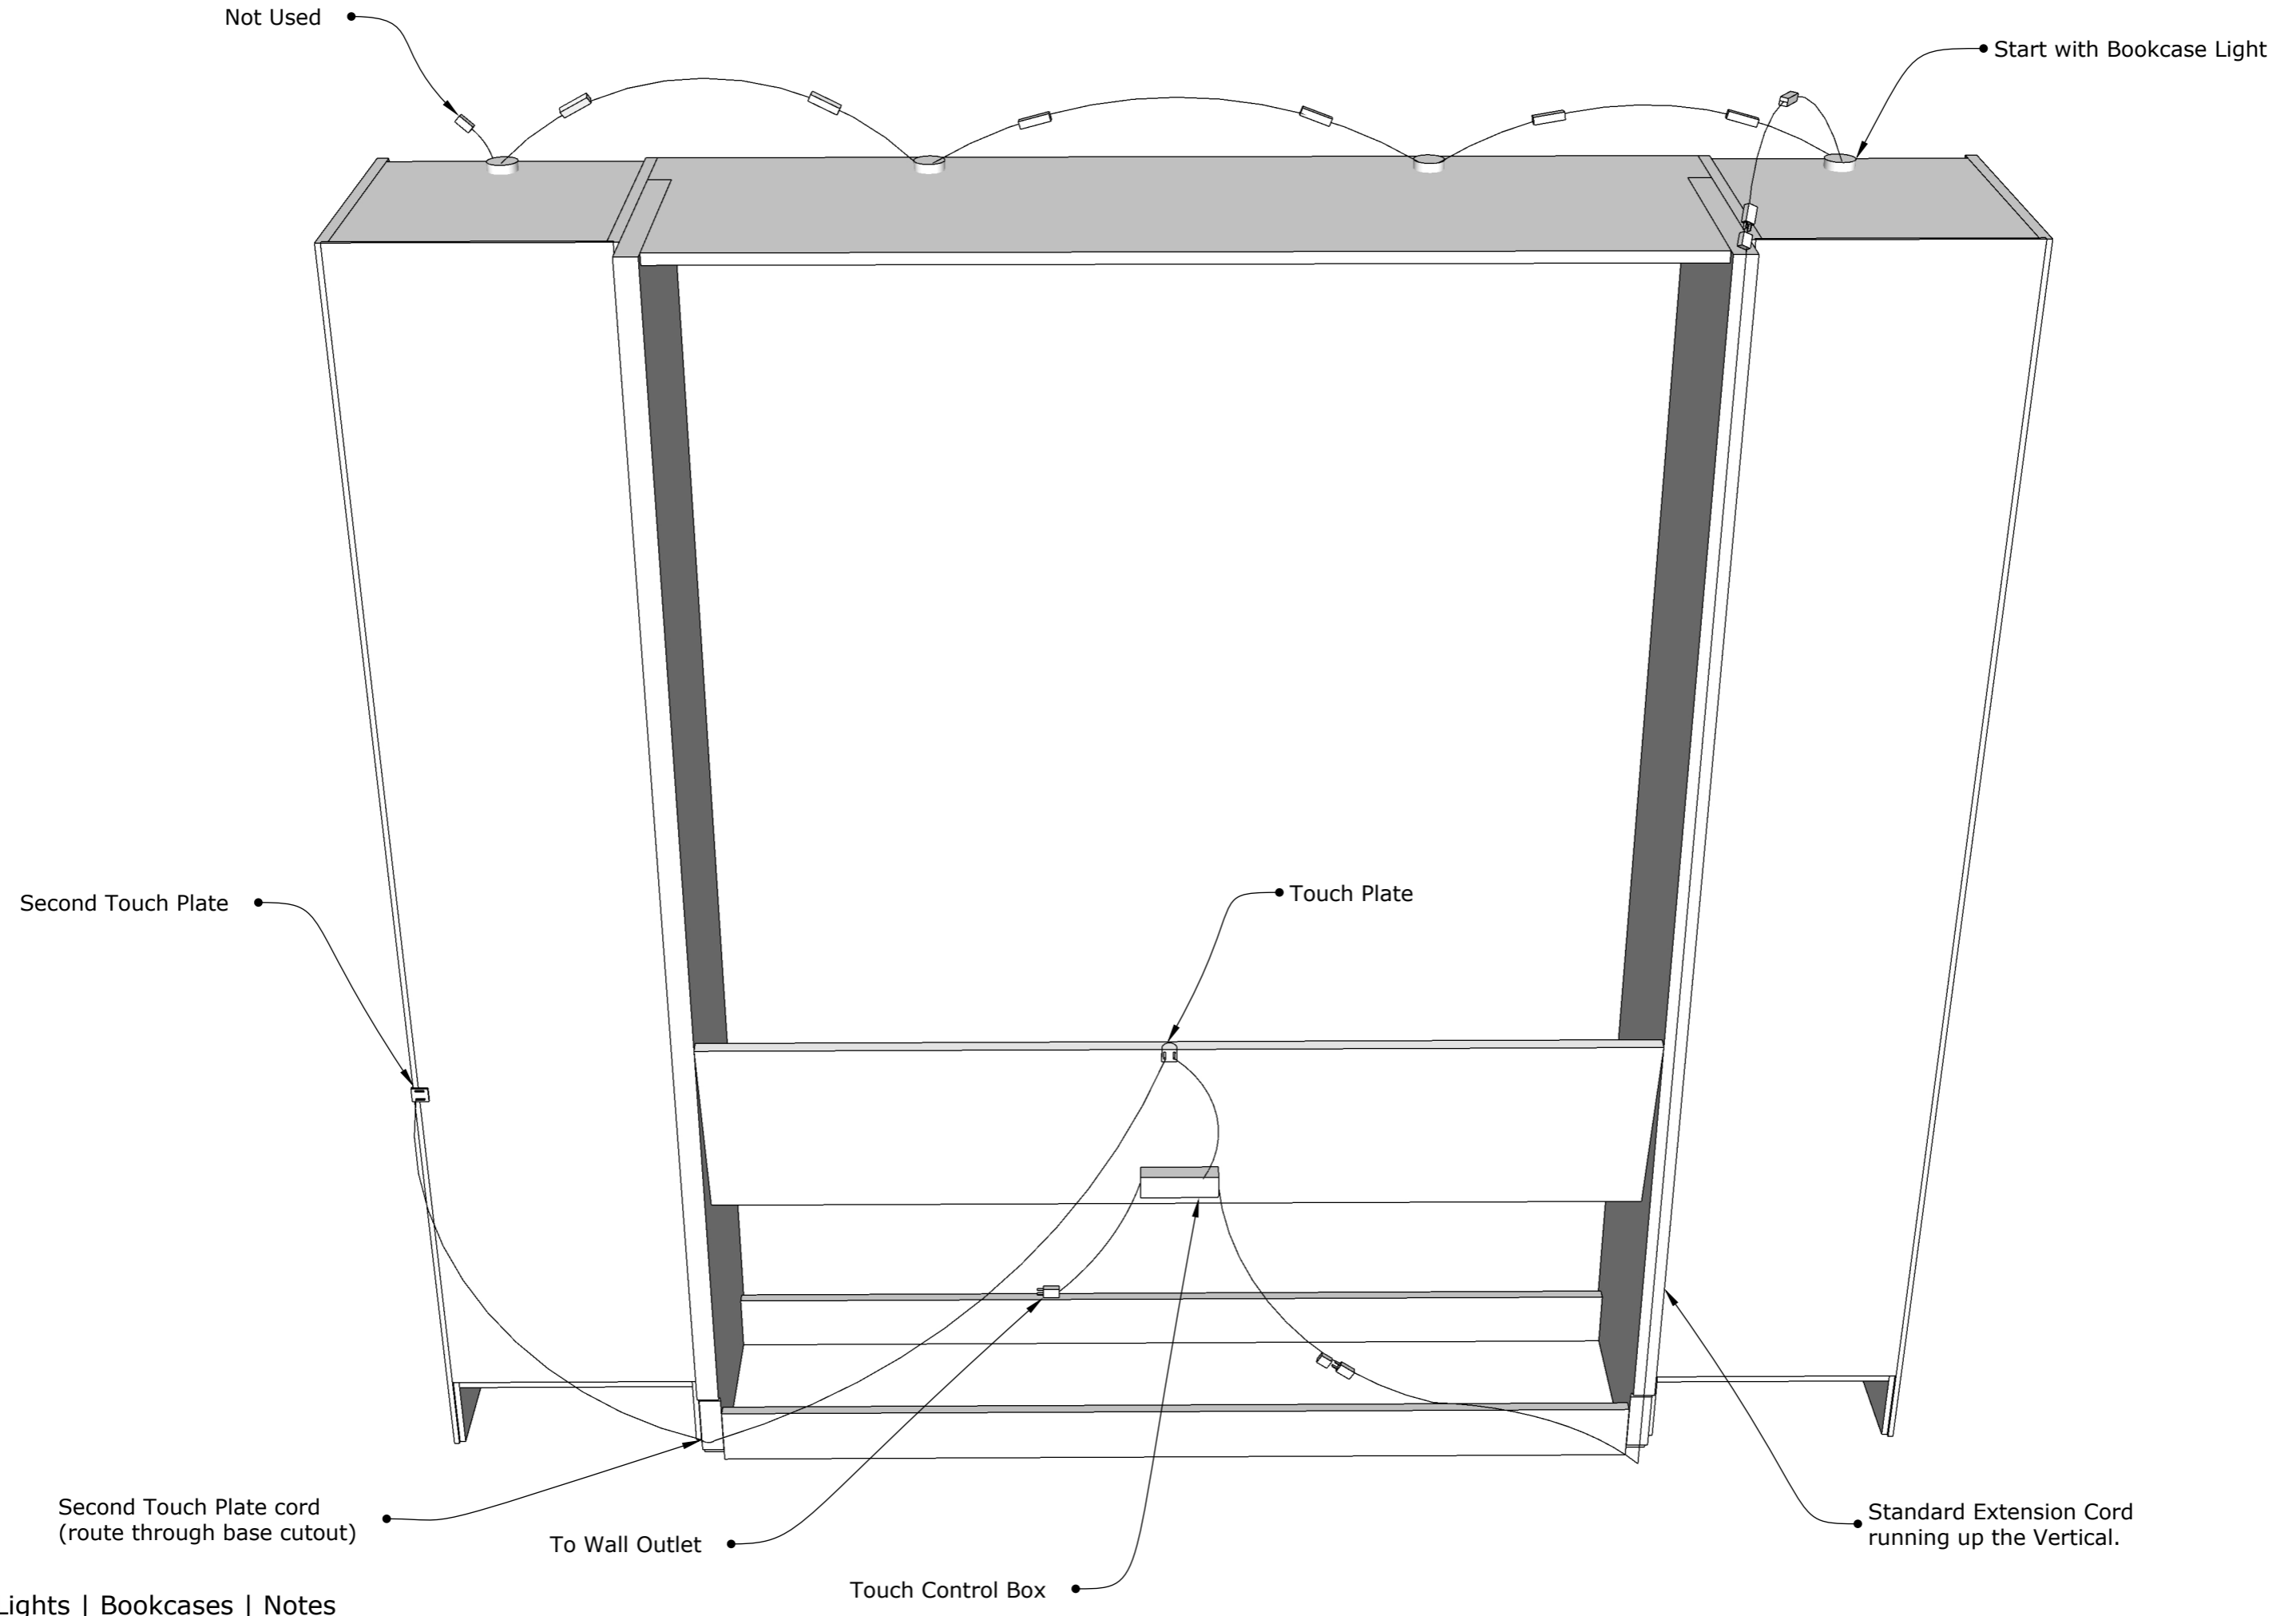


Outset Lights with Bookcases

(Back View of cabinet with Center/Bed section removed)

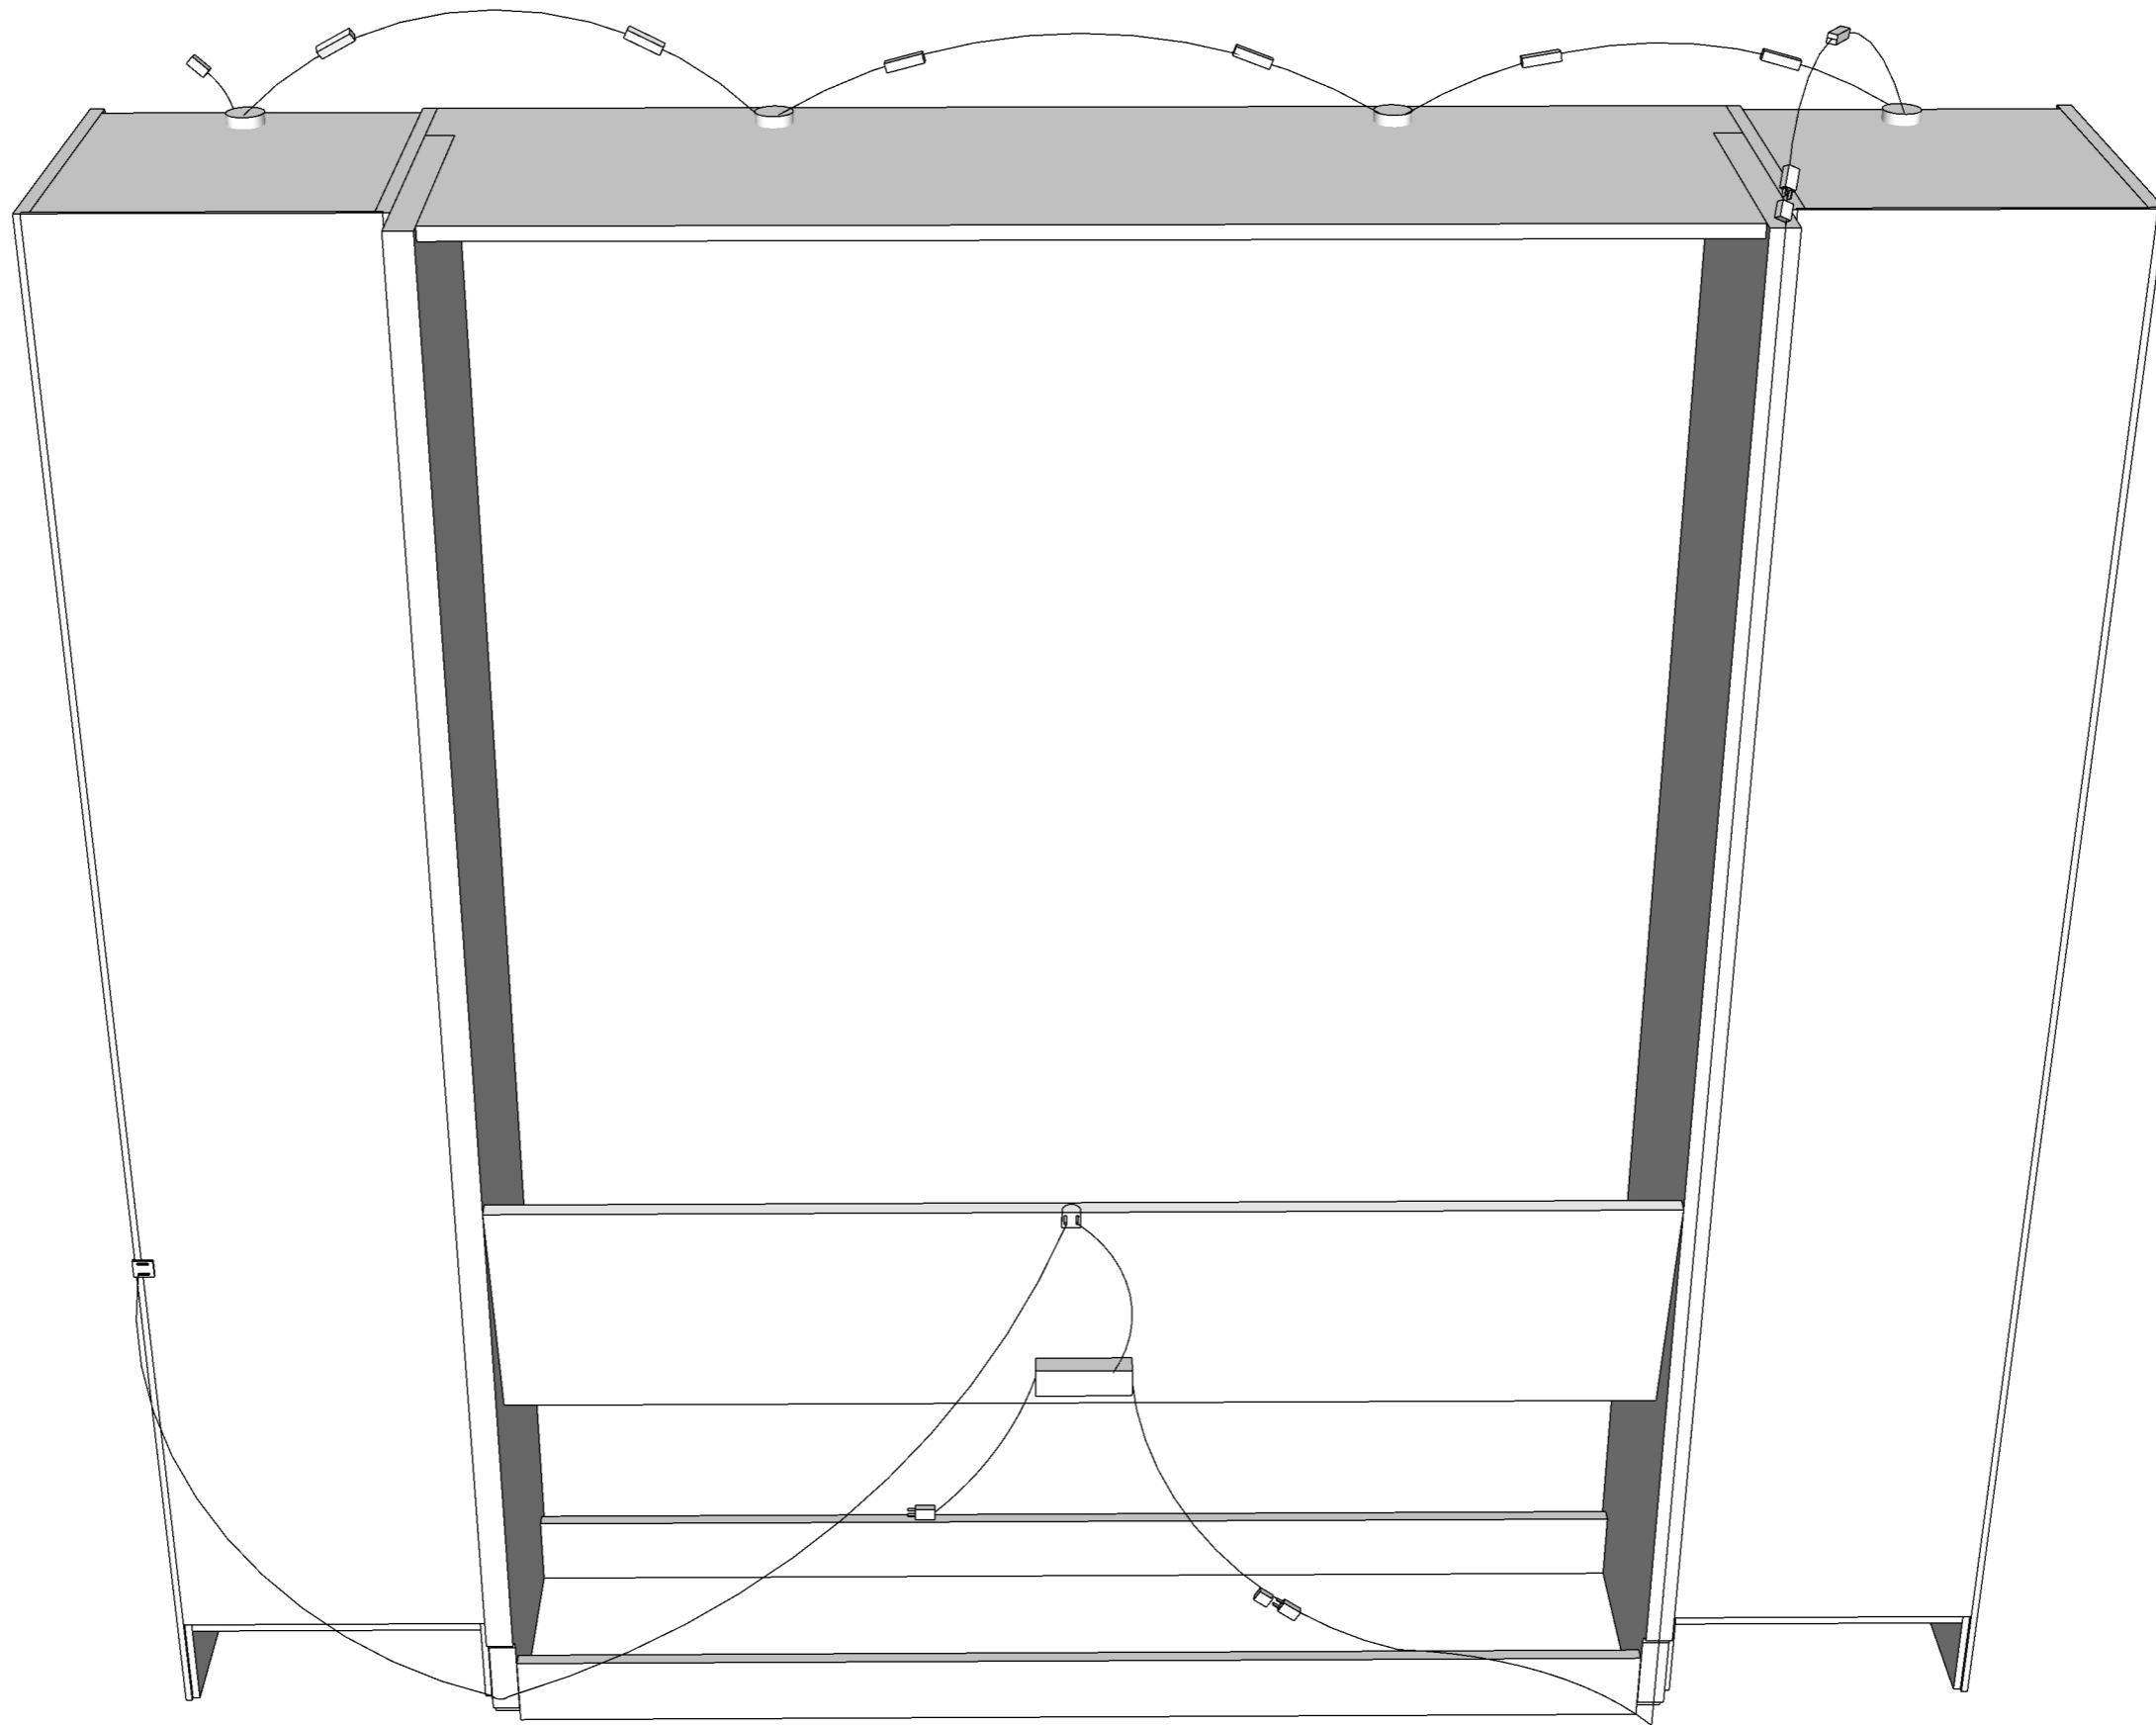

Outset Lights No Bookcases

(Back View of cabinet with Center/Bed section removed)

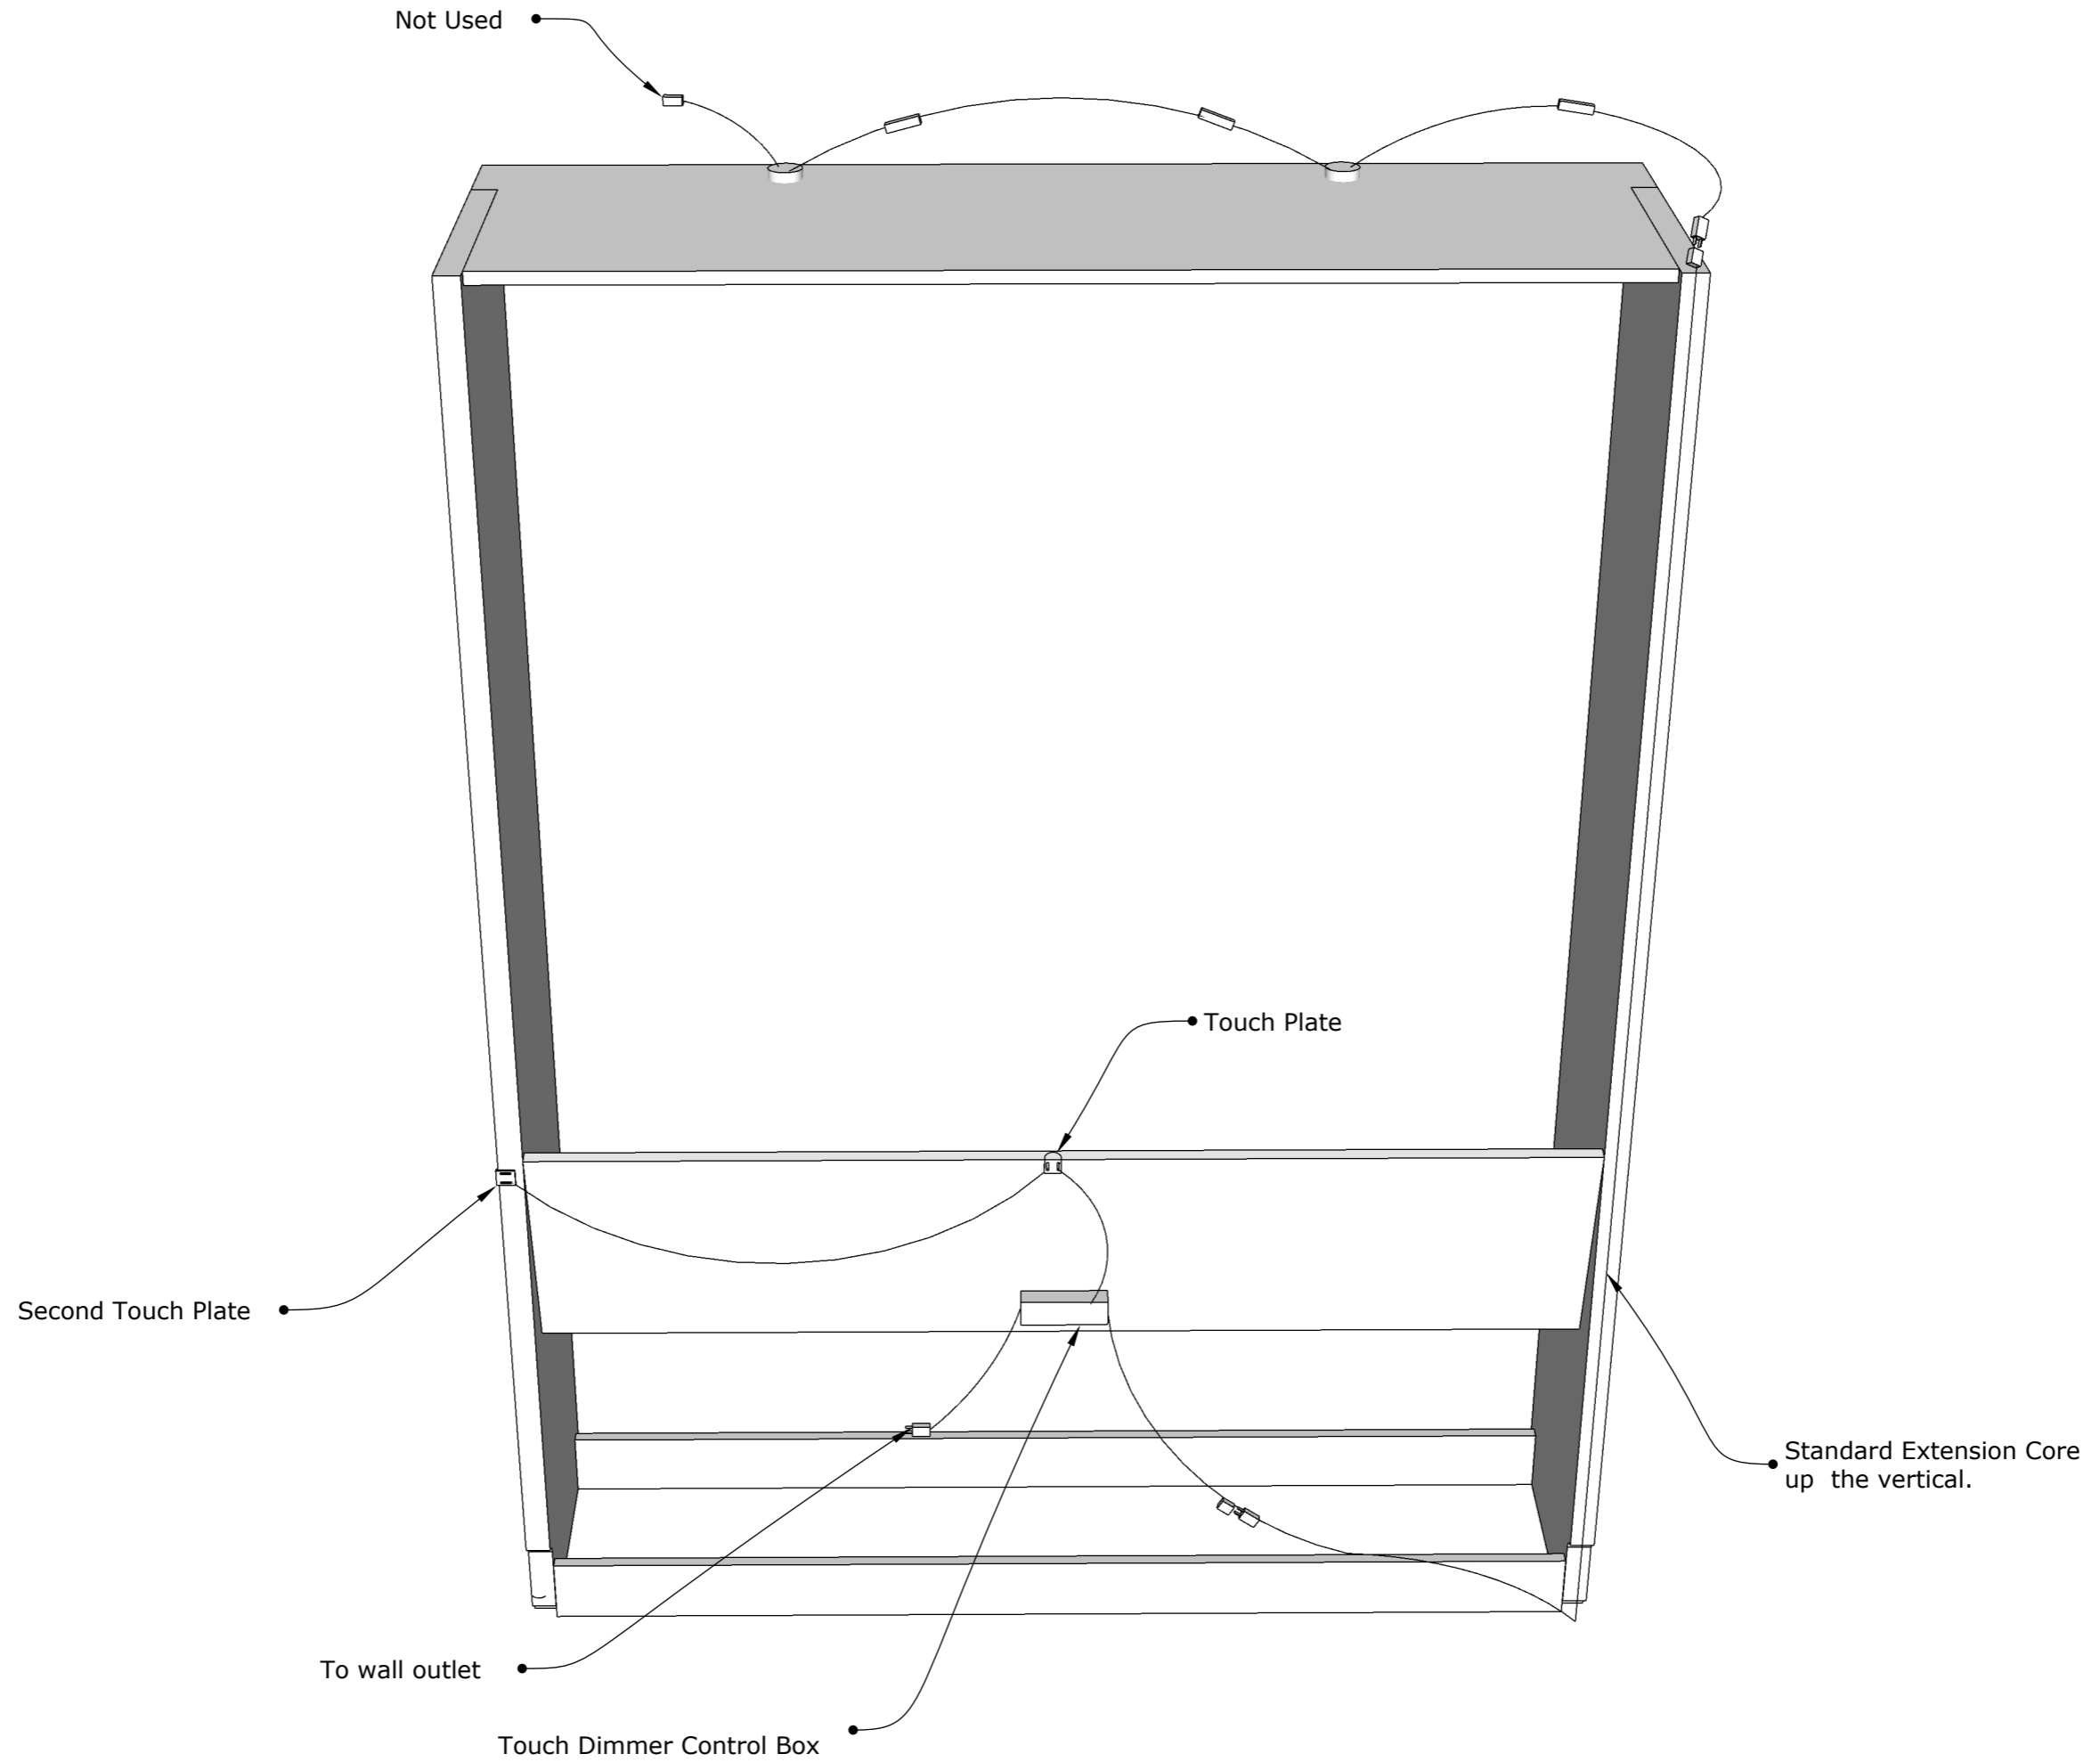

Outset Lights No Bookcases

(Back View of cabinet with Center/Bed section removed)

